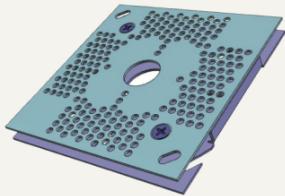


## VANILLA UNIVERSAL MUDKIT



Project Name:	Type:
Product Code:	Date:



## Vanilla Universal Mudkit

The Vanilla Universal Mudkit is a versatile mounting plate compatible with an array of fixtures that require a clean installation in a drywall application. The mudkit is made out of a metal and finished in sky white. The mudkit features machined perforated holes for easy plastering. Provided with 2 set screws.

## PERFORMANCE

## DRY MUD IN PLATE DETAILS

**MATERIAL:** METAL

**LOCATIONS:** WALL AND CEILING

**FINISH:** WHITE

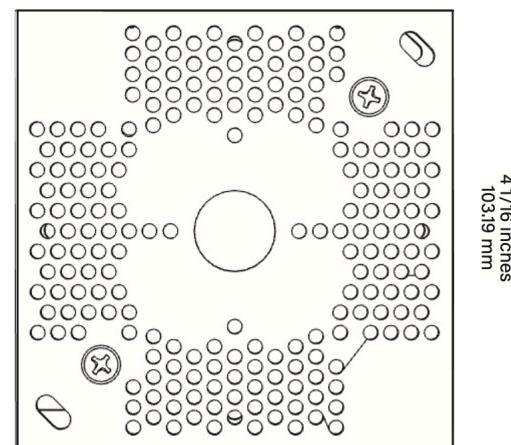
**INSTALL:** SCREW IN (SCREWS INCLUDED)

**DIMENSIONS:** 4 1/16 x 4 1/16 INCHES

**WALL** DRYWALL ONLY

## KEY DIMENSIONS

4 1/16 inches  
103.19 mm



## ORDER INFORMATION

## Order Code

VANILLA	PROFILE	FINISH
VAN	1 - MUDKIT	WH - WHITE

Project Name:	Type:
Product Code:	Date:

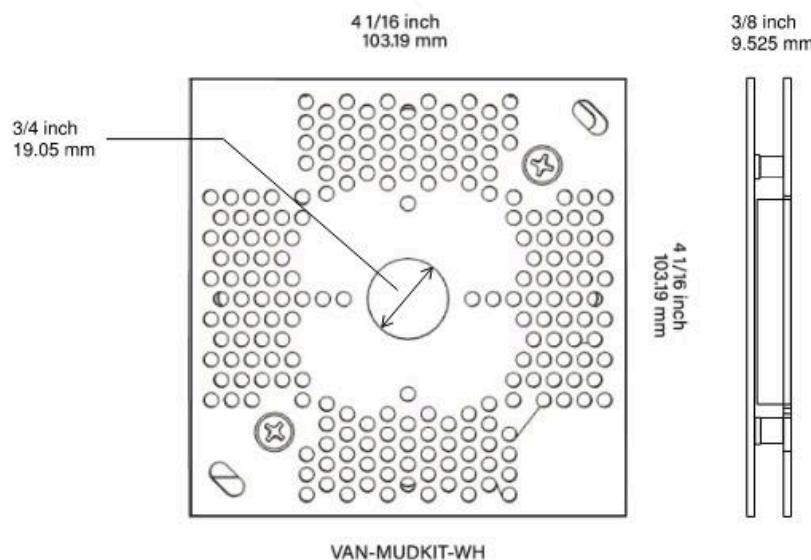
## INSTALLATION INSTRUCTIONS

**CAUTION: TO PREVENT ELECTRICAL SHOCK, ENSURE ELECTRICITY HAS BEEN TURNED OFF AT THE CIRCUIT BREAKER BEFORE BEGINNING.**

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

**WARNING:** All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use. Substitution of parts or accessories not designated for use with this product by Vanilla Lighting could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

## KEY DIMENSIONS







Project Name:	Type:
Product Code:	Date:

## INSTALLATION INSTRUCTIONS

## TRIMLESS JUNCTION BOX COVER INSTALLATION:

The trimless junction box cover is compatible with NEC approved 4" square junction boxes recessed in drywall and flush with the support structure.

1. Install compatible junction box (by others) to the framing structure. Ensure the junction box is flush with the base or front of framing structure (See **FIG. 1**).
2. Install the mounting plate to the junction box (See **FIG. 2**). Ensure the spacer alignment base is facing outward.
3. Using the mounting screws provided, attach the trimless junction box cover to the mounting plate (See **FIG. 3**).
4. Make a  $4\frac{1}{8}$ " square cutout in drywall at the intended trimless junction box cover location and proceed to install to framing structure (See **FIG. 4**). Apply and finish spackle up to the center hole of trimless junction box cover. Ensure #8 holes on the cover are free of spackle. (See **FIG. 5**).

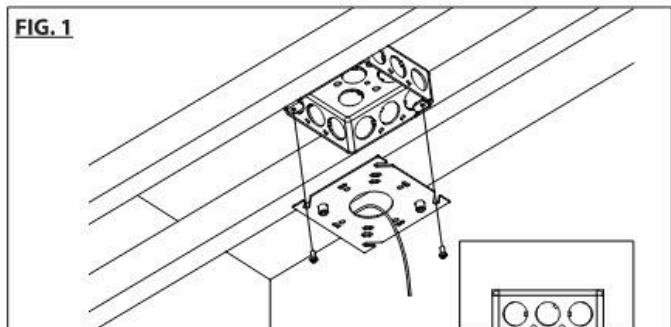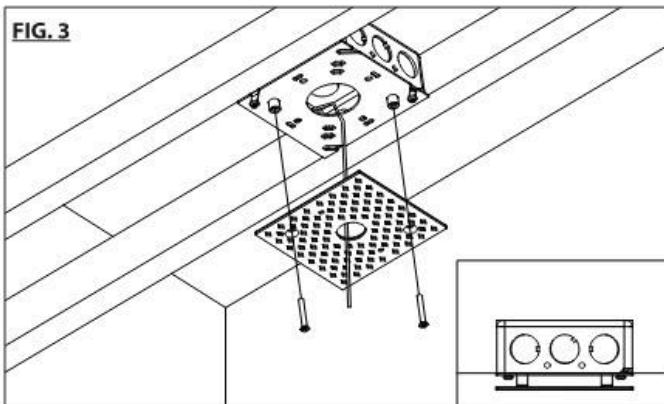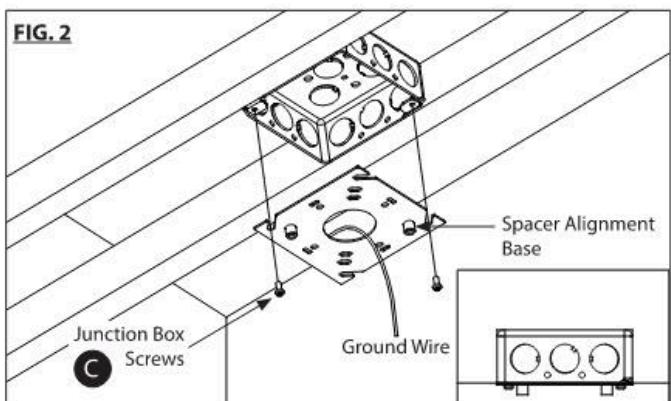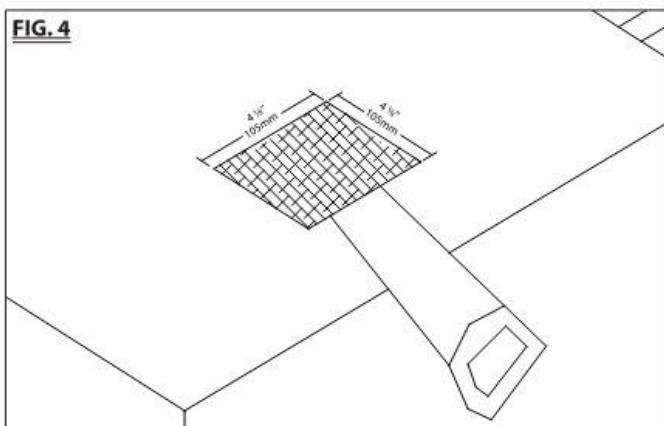**FIG. 3****FIG. 4****FIG. 5**